



RECHARGEABLE

# BP360 CAMP LANTERN

USER MANUAL



## DEAR VALUED CUSTOMER;

Thank you for purchasing the Bull Proof BP360 Rechargeable Camp Lantern.

This manual will guide you through the setup and usage of your new camp lantern, ensuring you get the best experience and long-lasting performance. This lantern is perfect to set the mood at your campsite.

For inquiries, please contact us using the following methods:


-  Email: [sales@bullproof.com.au](mailto:sales@bullproof.com.au)
-  Phone: (03) 9125 7069
-  Website: [www.bullproof.com.au](http://www.bullproof.com.au)



# TABLE OF CONTENTS

04	Product Overview	09	Warranty
04	Package Includes	10	Warranty
05	Features		
05	How to Use		
06	How to Charge		
07	Care and Maintenance		
08	Safety Precautions		

## 1. PRODUCT OVERVIEW:

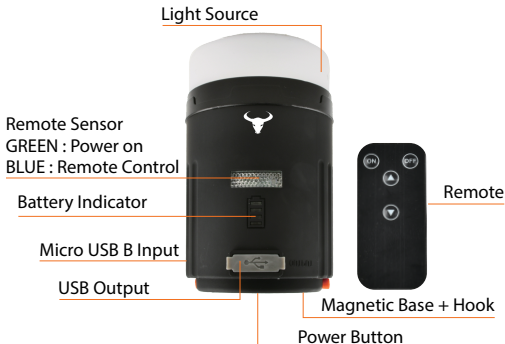

## 2. PACKAGE INCLUDES:

- BP360 Rechargeable Camp Lantern x 1
- USB to Micro USB-B Charging Cable x 1
- Remote Control x 1

## I 4. FEATURES:

- ✓ 300 Lumens
- ✓ 3 x Functions (High, Med, Low)
- ✓ 12 Hour Operating Time (High Mode)
- ✓ Rechargeable Design
- ✓ IPX6 Waterproof Rating
- ✓ Push Button Operation with Remote Option
- ✓ Can be used as charging bank

## I 5. HOW TO USE:

1. Unbox the product and make sure that all items are present before proceeding with the setup.
2. Pull the plastic tab out of the remote battery compartment (this allows the battery to connect).
3. Press the power button under the lantern to turn the lantern on and switch through the settings.

The remote sensor light and battery indicator on the back will turn green when on.

3. To operate the remote, hold the power button till the sensor light turns to blue.
4. Use the remote to control the light.

## I 6. HOW TO CHARGE:

### Charging Equipment :

You will need the supplied charging cable (or any cable that accepts Micro USB-B), and a charging head to plug into the power point.

### Charging Your Camp Lantern:

1. Unclip the plastic cover on the Micro USB-B charging port (input)
2. Connect your camp lantern to the power source.
3. The green battery indicator lights will indicate charge levels.
4. Once all battery indicator lines are green and no longer flashing, your camp lantern will be fully charged and ready to go.

\* Your camp lantern can also be used as a powerbank. To use this feature, plug a USB cable into the output port and connect the device that needs charging.

## **I 7. CARE AND MAINTENANCE:**

Keeping your camp lantern in good condition :

- Keep it clean for optimal performance.
- Avoid water, dust and debris from entering the charging ports. Use the supplied plastic clips to help cover.
- Keep your camp lantern in a dry environment.

## **I 8. SAFETY PRECAUTIONS:**

- DO NOT point the light source in anyones eyes, or your own.
- Always store in a dry environment and away from excessive hot or cold temperatures.

## **I 9. WARRANTY:**

This Limited Warranty covers defects in materials and workmanship in the BP360 Camp Lantern under normal use and maintenance, valid for 12 months from the date of purchase.

### **What is Covered:**

- Manufacturing defects that affect the performance of the lantern during normal use.
- Issues impacting functionality, including problems with brightness and general performance.
- Defects related to the internal components, including battery.
- Defects to any structural components of the torch.

### **What is Not Covered:**

- Damage resulting from improper handling, dropping, or using the lantern in ways not recommended by Bull Proof.
- Unauthorized modifications or repairs made to the product.
- Scratches, blemishes, or damage to the exterior housing due to regular wear and tear.
- Damage caused by exposure to extreme environmental conditions outside the specified operational range or submersion in water beyond the product's water-resistant capabilities.

- Damage resulting from failure to follow proper care and maintenance instructions provided by the manufacturer.





**BULLPROOF.COM.AU**