

# MOUNTING YOUR AWNING BRACKETS (LRG)



THE LARGE BRACKET SET IS IDEAL FOR MOUNTING HEAVY AWNINGS (e.g 270 Awning)

## WHAT'S IN THE BOX

### Rooftop Tent Mounting Kit :

- 2 x 3mm Stainless Steel (LRG) Brackets
- 1 x 3mm Stainless Steel "Extension Piece"
- 1 x 13mm Ratchet Spanner
- 19 x 20mm Bolts
- 19 x Nylock Nuts
- 35 x Washers

### Roof Rack / Cross Bar Mounting Kit :


- 2 x 3mm Stainless Steel (LRG) Brackets
- 4 x 6mm Stainless Steel Plates
- 1 x 13mm Ratchet Spanner
- 8 x 70mm Bolts & Nylock Nuts
- 8 x 20mm Bolts & Nylock Nuts
- 32 x Washers

**IMPORTANT TIP :** To avoid the nylock nuts seizing on the stainless steel bolts, use an anti-seize spray or lubricant before fixing the nuts on.



## BRACKETS TO ROOF BARS / RACK

1. Using one of the brackets, position it over the bar you are wanting to mount to.
2. With the supplied long bolts (put a washer on first), put them through the slots on the base and position them around the bar.
3. Using 2 x 6mm plates supplied, line up the holes with the bolts under the bar. (This creates a sandwich effect around the bar).
4. Use an anti-seize spray or lubricant on the bolt thread to stop the nylock nuts from seizing on the bolt.
5. Put on another washer, followed by the nylock nut and use the supplied ratchet spanner to tighten.
6. Ensure the nylock nuts are comfortably tight and secure before mounting the awning.

**Note :** Make sure you do the nylock nuts up evenly so the plate stays straight.

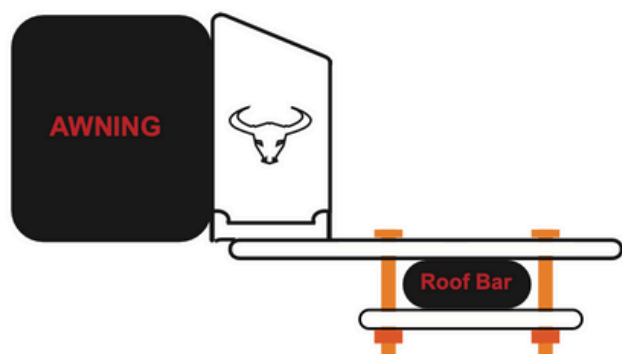

OR

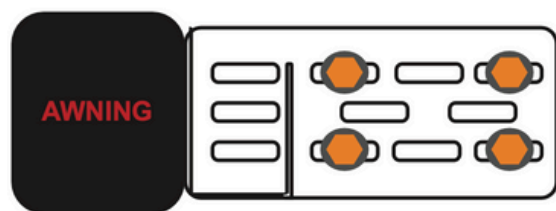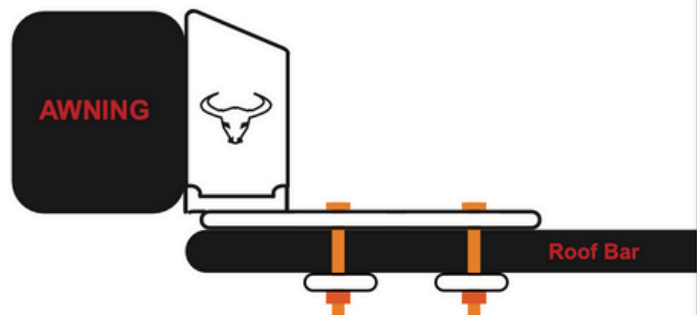


Grey - Washer  
Orange - Bolt Head

Follow the same steps below, just position the plates horizontally as shown above.

## BRACKETS TO ROOFTOP TENT

1. Slide 4 bolts into each side of the rooftop tent channels (use the bottom 2 channels).
2. Once in place for the brackets, put 2 washers on each bolt (this ensure that the bracket doesn't fowl with the rooftop tent top shell when closing up).
3. Ensure all bolts are treated with anti-seize spray or lubricant to stop the nylock nut from seizing on the bolt.
4. Line the bracket slots up with the bolts in the Rooftop Channels. Apply 1 x washer, followed with a nylock nut.
5. Before tightening the nuts, apply upwards pressure on the base of the bracket so it stay flat up against the base of the rooftop. This keeps the brackets straight, and therefore the awning too!

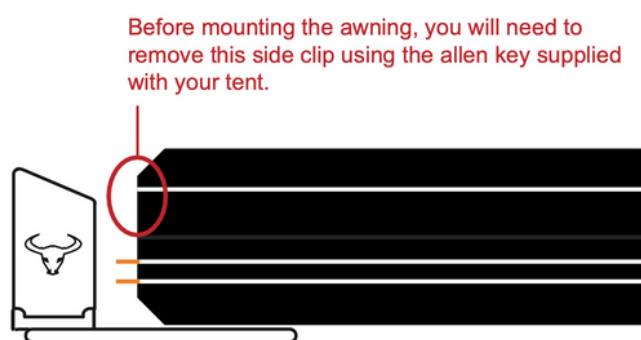

Before mounting the awning, you will need to remove this side clip using the allen key supplied with your tent.

## AWNING TO BRACKETS

**NOTE :** If your tent has a side clip (on the side of the awning) remove it before putting your awning on!!

1. Slide 4 x bolts to either side of the awning using the mounting channels on the back. Slide an additional 3 bolts towards the hinge end for the “extension piece”. (It will need to sit inside the brackets).
2. Carefully lift the awning up (min. 2 people), and line the bolts up with the slots on the brackets. Apply 1 x washer and follow with a nylock nut (use anti-seize spray/lubricant on the bolts). Use the ratchet spanner to tighten.

**Note :** The “extension piece” allows for your side rooftop tent pole to still have a fixing point.



**Note :** You can choose where the bolts are placed in the awning channels to adjust the height that your awning sits at. For example, if your have doors on your canopy that need extra height clearance, put the bolts in the lower channels so the awning can be mounted higher on the bracket.

