



STED X

RIFLESCOPE KIT

User Manual

DEAR VALUED CUSTOMER;

Thank you for choosing our STED X All-rounder Kit.

We appreciate your trust and confidence in our brand. Your satisfaction is our top priority, and we are committed to delivering quality products that meet your needs.

If you have any questions or need further assistance, please do not hesitate to reach out to our customer support team. We are always here to help.

Thank you once again for your purchase. Enjoy your new product!



LIFETIME WARRANTY



30 Day FREE Returns
Satisfied or refunded.


TABLE OF CONTENTS

02	Contents	14	Zeroing your scope
03	Product Overviews	15	Windage & Elevation (Red Dot/Laser)
07	Package Incl.	17	Product Specific Instructions
08	Features & Models	21	Care & Maintenance
09	Mounting Instructions	22	Warranty Information
12	Eye-piece Focussing		
13	Windage & Elevation Adjustment		


1. PRODUCT OVERVIEW (SCOPE):



1. PRODUCT OVERVIEW (RED DOT & LASER):

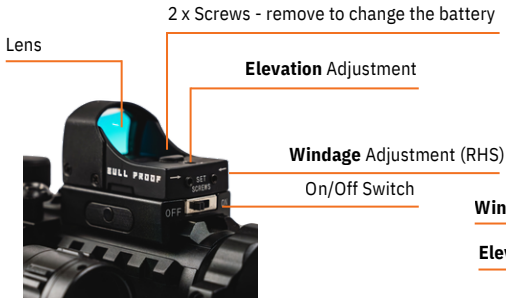

On/Off Button & Battery Access (can screw off end to mount tail switch instead)

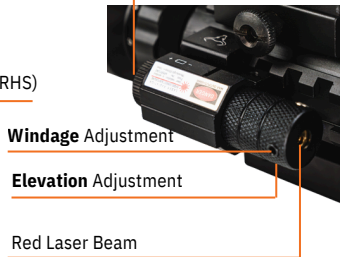

1. PRODUCT OVERVIEW (TORCH):



2. PACKAGE INCLUDES:

- Rifle scope x 1
 - Reflex Red Dot x 1
 - Red Laser Beam x 1
 - Torch x 1
 - Lens Cloth x 2
 - Batteries (CR2032) x 2
 - USB-C Charging Cable x1
 - Allen Keys x 4
 - Batteries (LR44) x 6
 - Torch & Laser Tail Switch x 1
-

3. INTRODUCTION:

Welcome to the Bull Proof Community! We are super stoked to have you onboard, and hope you love your new STED X Kit.

The STED X Kit was developed as a user friendly, ultimate entry-level optic kit with all the goodies pre-assembled for a quick and easy installation.

A true all-rounder set up perfect for those getting started. Backed by our **Lifetime Warranty** and **Satisfied or Refunded Guarantee** - ensuring complete confidence in your new purchase.

4. FEATURES:

- ✔ Blue Multi-Coated Lens
- ✔ Second Focal Plane Optic
- ✔ Duplex Crosshair Reticle
- ✔ Aircraft Grade Aluminium
- ✔ Fully pre-assembled
- ✔ Removable Protective End Caps
- ✔ Included Cleaning Lens Cloth
- ✔ Backed by a Lifetime Warranty
- ✔ Picatinny Mount Included
- ✔ Allen Keys Included
- ✔ Batteries + Spares Included
- ✔ Tail Switch Included

5. KEY SPECS:

3-9x40	Blue Multi-Coated Lens	40mm Objective	¼ (0.25) MOA
Red Dot	2 x Brightness Settings	22mm Objective	1 MOA Click Value
Laser	Red Beam	Tail Switch Inc.	<5mW Max Output
Torch	3 Brightness, Flicker & SOS	Tail Switch Inc.	100 Lumens

6. MOUNTING INSTRUCTIONS:

CAUTION : When mounting your scope, always ensure that your firearm is NOT loaded and no ammunition is present in the area. We recommend that your scope should always be mounted by an experienced professional.

Preparing your Firearm & Components:

1. Ensure the firearm is completely unloaded and the chamber is clear before beginning.
2. Place the rifle on a stable gun vise or rest to keep it secure during installation.
3. Confirm that your scope mounts and base are compatible with both the rifle and the scope. (Picatinny)
4. Lightly clean mounting surfaces to remove oil, dust or debris.

Attaching the Pre-installed Picatinny Mount:

1. On the base of the scope, there is already a pre-installed picatinny mount ready to go.
2. Using the largest supplied allen key, loosen the screws on the mount (just enough to fit onto the rail).
3. Sit the mount on the picatinny rail and position the scope accordingly.

6. MOUNTING INSTRUCTIONS:

Positioning the Riflescope & Levelling:

1. Ensure the riflescope is not obstructing or touching against any components of the firearm. If so, another mount may be required to give the necessary clearance.
2. Use a bubble level to ensure the scope and firearm are exactly level.
3. Check the reticle to ensure it is level.
4. Once happy with position, tighten the mount screws to secure the scope on the rail/base.

Post-Mounting Checks:

1. Cycle the rifle bolt to ensure proper clearance with the scope.
2. Confirm the objective bell clears the barrel.
3. Check that the magnification ring rotates smoothly.
4. Inspect all fasteners again after your first shooting session, as screws may settle slightly.

6. MOUNTING INSTRUCTIONS:

Important Considerations:

1. Never over-tighten scope rings, as this can damage the scope tube or internal components.
2. Always use a quality inch-pound torque wrench when installing optics.
3. Re-check mounting screws periodically to ensure they remain secure.

7. EYEPIECE FOCUSING:

The eyepiece focus allows you to adjust the clarity of the reticle (crosshair) to suit their individual eyesight. By rotating the eyepiece, the reticle becomes sharp and clearly defined, ensuring quicker target acquisition and reducing eye strain during use.

1. Hold the scope and look through the eyepiece.
2. Ensure the reticle appears sharp and well-defined. If it does not, proceed with adjustments.
3. Rotate the eyepiece in either direction to adjust the reticle's sharpness. (NOTE : This piece can feel stiff to move, this is purposefully done to ensure it doesn't move once set and in use).
4. If the reticle's focus improves but is not perfect, continue rotating in the same direction.
5. If the reticle's focus worsens, rotate the bell in the opposite direction until the reticle is sharp and clear.

NOTE: If not already done, you will need to remove (pull off) the rubber end protective caps to access the eye piece and make the necessary adjustments.

8. ADJUSTING WINDAGE & ELEVATION TURRETS (Riflescope):

Windage Turret :

Located on the right side of the scope. Screw off the cap to make adjustments.

This turret is responsible for controlling the horizontal point of impact of the bullet. Turning this turret moves the shot left or right on the target, allowing you to correct shots that land either side of the target centre. **Turn clockwise to move left, and counter-clockwise to move the point of impact right.**

Elevation Turret :

Located on the top of the scope. Screw off the cap to make adjustments.

This turret is responsible for controlling the vertical point of impact of the bullet. Turning this turret moves the shot up or down on the target, allowing you to compensate primarily for bullet drop at longer distances. **Turn clockwise to lower, and counter-clockwise to raise the point of impact.**

1. Remove the turret caps.
2. Identify the adjustment direction marked on each turret.
3. Make small adjustments to either your elevation and/or windage turrets - this is measured in noticeable 'clicks'. These 'clicks' represent $\frac{1}{4}$ of an inch movement at 100 yds.

9. INSTRUCTIONS FOR ZEROING THE SCOPE:

CAUTION: It is imperative that these steps are performed in a safe and approved rifle range. Always follow safe firearm handling practices. If unsure of this process, seek assistance from a professional.

Before you start :

We recommended you bore sight your rifle to ensure your scope and barrel are both aligned at the intended point of impact on your target. Information for this process should be supplied with your bore sight.

Sighting in your new scope :

1. Set your target up at your desired zeroing distance (commonly 50m or 100m)
2. Stabilise the firearm using a rest or bipod to minimise movement.
3. Fire a 3-shot group at the centre of the target
4. Check the point of impact and determine how far the average is from the target centre.
5. Adjust your elevation and windage turret as needed to move the point of impact.
6. Repeat until impact is consistently hitting desired target.
7. Screw caps back on to protect the turrets.

10. ADJUSTING WINDAGE & ELEVATION TURRETS (Red Dot):

Windage Turret :

Located on the right side of the red dot. Use supplied allen key to adjust.

Responsible for controlling the horizontal point of impact of the bullet. Turning this turret moves the shot left or right on the target, allowing you to correct shots that land either side of the target centre.

Turn clockwise to move left, and counter-clockwise to move the point of impact right.

Elevation Turret :

Located on the top of the red dot. Use supplied allen key to adjust.

Responsible for controlling the vertical point of impact of the bullet. Turning this turret moves the shot up or down on the target, allowing you to compensate primarily for bullet drop at longer distances.

Turn clockwise to lower, and counter-clockwise to raise the point of impact.

1. Adjust this **AFTER** Zeroing your scope so you can match it to the centre of your scope reticle.
2. Identify the adjustment direction marked.
3. Make small adjustments to either your elevation and/or windage with the smallest allen key supplied.
4. Check red dot position with the centre of your scope reticle to ensure it is accurate.

11. ADJUSTING WINDAGE & ELEVATION TURRETS (Laser):

Windage Turret :

Located on the right side of the laser. Use supplied allen key to adjust.

Responsible for controlling the horizontal point of impact of the bullet. Turning this turret moves the shot left or right on the target, allowing you to correct shots that land either side of the target centre.

Turn clockwise to move left, and counter-clockwise to move the point of impact right.

Elevation Turret :

Located on the bottom of the laser. Use supplied allen key to adjust.

Responsible for controlling the vertical point of impact of the bullet. Turning this turret moves the shot up or down on the target, allowing you to compensate primarily for bullet drop at longer distances.

Turn clockwise to lower, and counter-clockwise to raise the point of impact.

1. Adjust this **AFTER** Zeroing your scope so you can match it to the centre of your scope reticle.
2. Identify the adjustment direction marked.
3. Make small adjustments to either your elevation and/or windage with the smallest allen key supplied.
4. Check laser beam position with the centre of your scope reticle to ensure it is accurate.

12. INSTRUCTIONS FOR THE RECHARGEABLE TORCH:

Charging:

1. Use the supplied USB to USB-C Charging cable to charge the torch.
2. Plug into the USB-C Charging port towards the head of the torch on the underneath side.
3. Power button will light up when charging.

Standard On/Off of the Torch:

1. Press the power button once to turn the torch on.
2. Press again to change to the lower brightness settings (3 in total), and to get to the flicker and SOS mode.
3. HOLD the button down if wanting to turn the torch OFF instead of changing through the settings.

12. INSTRUCTIONS FOR THE RECHARGEABLE TORCH:

How to use the tail switch:

1. Screw the end of the torch off, and replace with the supplied tail switch to suit (simple screw on)
2. The upper (thicker) part of the tail switch will control ON and OFF with one simple press.
3. The lower (thinner) part of the tail switch will allow you to hold the torch on and then turn off once you remove your finger off.
4. To change brightness settings, still use the original power button when the torch is on.

13. INSTRUCTIONS FOR THE RED DOT:

How to change the battery:

1. Using the supplied allen key, loosen the 2 x screws on top of the red dot entirely (marked on the product overview).
2. This will remove the top section of the red dot from the base, where the battery is located.
3. Remove the old battery and replace with the new one. Ensuring it is the correct orientation.
4. Once in place, sit the top of the red dot back on the base, and re-insert/tighten the screws in place.

Powering & Settings:

1. The switch at the back of the red dot will control power and settings.
2. When the switch is far left, it is in the off position.
3. When the switch is in the middle, this will be on the lightest red dot setting.
4. When the switch is far right, this will be the brightest red dot setting.

13. INSTRUCTIONS FOR THE LASER:

Changing the Battery:

1. Screw off the cap at the end of the laser (where the on/off button is located)
2. Remove old batteries (if any) and replace with new. Will require 3 of the small batteries supplied.
3. Check they are put in the correct orientation. Screw cap back on once done.

How to use the tail switch:

1. Screw the end of the laser off, and replace with the supplied tail switch to suit (simple screw on)
2. Once screwed on, you can use the tail switch by holding down to show the red dot - once finger is removed it will turn off.

I 14. CARE AND MAINTENANCE:

By following these care instructions, you will maintain the clarity and functionality of your scope, ensuring optimal performance and longevity.

- Keep lenses clean using the supplied soft lens cloth or lens brush to remove dust and debris.
 - Avoid touching the glass with fingers to prevent oils or smudges on the lens.
 - Use lens caps when the scope is not in use to protect the optic.
 - Store in a dry place to prevent moisture or condensation buildup.
 - Check mounting screws periodically to ensure the scope remains securely mounted.
- Avoid harsh chemicals when cleaning; use only lens-safe cleaning solutions if required.
 - Protect from heavy impacts or drops which may affect internal alignment.
 - Wipe down the scope body with a clean cloth after exposure to rain, dust, or mud.
 - Inspect turrets and caps occasionally to ensure they are secure and functioning correctly.
 - Use the supplied cover to protect the red dot lens and components when not in use.

WARRANTY INFORMATION

At Bull Proof, we stand behind the quality and reliability of our products. Every STED X riflescope is backed by our Lifetime Warranty and Satisfied or Refunded Guarantee, giving you complete confidence in your purchase.

Our lifetime warranty will cover you against manufacturing defects and workmanship faults. If your scope experiences a fault under normal use, Bull Proof will repair or replace the product at our discretion.

What the Warranty Covers

- Manufacturing defects
- Mechanical faults under normal use
- Optical defects affecting performance

What the Warranty Does Not Cover

- Damage caused by misuse, abuse, or improper installation
- Damage resulting from accidents, impacts, or unauthorised modifications
- Cosmetic damage that does not affect the function of the scope

If you experience any issues with your riflescope, please contact the Bull Proof support team with proof of purchase and a description of the problem. Our team will guide you through the next steps to resolve the issue quickly and efficiently.

sales@bullproof.com.au | (03) 9125 7069 | 1 Rawanne Close, Pakenham, 3810

